PolyGard® Gas Controller MGC-03

Two-Channel Analog Gas Controller
Serial Number MGC_03

User Manual

January, 2015

PolyGard is a registered trademark of MSR

GAMGC03_E_0115

Phone: 0049(0)8531/9004-0 Fax: 0049(0)8531/9004-54
MSR-Electronic GmbH, Würdinger Str. 27, D 94060 Pocking www.msr-electronic.de

Specification subject to change without notice.
Printed in Germany

1 Intended Use 4

2 Operating Instruction 5

2.1 Description Keypad User Interface 5

2.2 Setting / Changing Parameters or Set points 5

2.3 Code Level 6

3 Menu Overview 6

3.1 Fault Management 7

3.1.1 Acknowledge a Fault 7

3.1.2 Error Memory 7

3.1.3 System Errors 8

3.2 Status Alarm 8

3.3 Status Relay 8

3.3.1 Manual Operation of the Relays 9

3.4 Menu Measuring Values 9

3.5 Menu Relay Parameters 10

3.5.1 Relay Mode 11

3.5.2 Relay Function Static / Flash 11

3.5.3 Latching Mode 11

3.5.4 Horn Function 12

3.5.5 External Relay Operation 13

3.5.6 Delay Mode of the Relay 13

3.6 Menu MP Parameters 13

3.6.1 Activate – Deactivate MP 15

3.6.2 Selection Gas Type 15

3.6.3 Measuring Range 16

3.6.4 MP Signal 16

3.6.5 Threshold / Hysteresis 16

3.6.6 Delay of Alarm ON or OFF 16

3.6.7 Control Mode 17

3.6.8 MP Fault Assigned to Alarm 17

3.6.9 Alarm Assigned to Alarm Relay 17

3.6.10 MP Signal Assigned to Analog Output 17

3.7 Menu System Parameters 18

3.7.1 Service Mode 19

3.7.2 Software Version 19

3.7.3 Maintenance Concept 19

3.7.4 Average Function 19

3.7.5 Customer Password (Code 4) 20

3.7.6 Analog Output 20

3.7.7 Define the Failure Relay 20

3.7.8 Power On Time 20

4 Mounting / Electrical Connection 21

4.1 Electrical Connection 21

4.2 Connection Diagram 22

4.3 Connector Block / Overview MGC-03 Module 23

Phone: 0049(0)8531/9004-0 Fax: 0049(0)8531/9004-54
MSR-Electronic GmbH, Würdinger Str. 27, D 94060 Pocking www.msr-electronic.de

Specification subject to change without notice.
Printed in Germany

5 Commissioning 24
5.1 Commissioning 24
5.2 Checklist Commissioning 25
6 Configuration and Parameter Card 26
6.1 Configuration Card of System Parameters 26
6.2 Configuration Card of Alarm Relays 26
6.3 Configuration Card of Measuring Parameters 26
7 Technical Data 27
8 Part Disposal 29
9 Notes and General Information 29
9.1 Intended Product Application 29
9.2 Installers` Responsibilities 29
9.3 Maintenance 29
9.4 Limited Warranty 29

Phone: 0049(0)8531/9004-0 Fax: 0049(0)8531/9004-54
MSR-Electronic GmbH, Würdinger Str. 27, D 94060 Pocking www.msr-electronic.de

Specification subject to change without notice.
Printed in Germany

Analog Gas Controller System MGC-03

1 Intended Use

The PolyGard® MGC-03 Gas Controller is used for monitoring and warning of toxic, combustible and refrigerant gases as well as of external temperature and humidity.

The Gas Controller MGC-03 can control 2 analog gas transmitters with 4 to 20 mA or (0)2 to 10 V analog signal. Four alarm thresholds are free adjustable for each Measuring Point (MP). Every alarm threshold can be assigned to one of the maximum 4 alarm outputs (R). The Gas Controller can interface via the (0)4 to 20 mA or (0)2 to 10 V output with any compatible electronic analog control, DDC/PLC control or automation system.

The free adjustable parameters and alarm threshold enable a very flexible use in the gas measuring technique. Simple and comfortable commissioning is possible due to factory adjusted parameters.

Configuration, parameter settings and operation are done via the logical, easy system menu structure without specific programming knowledge.

The intended sites within the ambient conditions as specified in the Technical Data are all areas being directly connected to the public low voltage supply, e.g. residential, commercial and industrial ranges as well as small enterprises (according to EN50 082).

The PolyGard® Gas Controller MGC-03 must not be used in potentially explosive atmospheres.

Phone: 0049(0)8531/9004-0 Fax: 0049(0)8531/9004-54
MSR-Electronic GmbH, Würdinger Str. 27, D 94060 Pocking www.msr-electronic.de

Specification subject to change without notice.
Printed in Germany

2 Operating Instruction

The complete configuration, parameterization and service are made via keypad user interface in combination with the display screen. Security is provided via four password levels against unauthorised intervention.

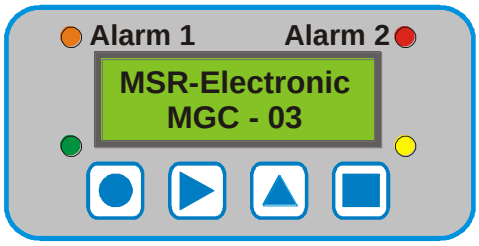

2.1 Description Keypad User Interface

Exits programming and saves settings, returns to the previous menu level.

Enters submenus, save setting.

Scrolls up in main menu and submenus, increases or decreases a value.

Moves the cursor.

LED orange: Flashes when alarm one or more alarms are active.
Permanently on, when at least one relay is manually operated..

LED red: Flashes when alarm two or more alarms are active.
Permanently on, when at least one relay is manually operated.

LED yellow: Flashes at system or sensor failure or when maintenance needed.

LED green: Power LED

2.2 Setting / Changing Parameters or Set points

Open desired menu window.

Code window opens, if no code level approved.

After input of the valid code the cursor jumps on the first position segment to be changed.

Push the cursor onto the position segment, which has to be changed.

Change the parameter / set point.

Save the changed value.

Finished

Phone: 0049(0)8531/9004-0 Fax: 0049(0)8531/9004-54
MSR-Electronic GmbH, Würdinger Str. 27, D 94060 Pocking www.msr-electronic.de

Specification subject to change without notice.
Printed in Germany

2.3 Code Level

All inputs and changes are protected by a four-digit numeric code (= password) against unauthorised intervention. All menu windows are visible without entering a code.

Level 1: (1234)
Code level 1 allows the operator to acknowledge alarms and to manually activate the alarm relays.

Level 2:
Code level is intended for the service technician to change parameters and set-points.

Level 3:
With code level 3 it is possible to register and deregister transmitters in addition to code level 2. This code is released by MSR-E only in emergency situations.

Level 4:
Code level 4 is intended for updating the maintenance date. Normally the code is only known by the service technician and can be changed individually via code level 2.

The release of a code level is cancelled if no button is pushed within 15 minutes.

3 Menu Overview

The operation of the Gas Controller MGC-03 is effected by a simple and logical menu structure which is easy to learn. The operating menu contains the following levels:

- Starting menu: Scrolling of the measuring points of all registered transmitters in 10-second intervals.
- Main menu
- Submenu 1 and 2

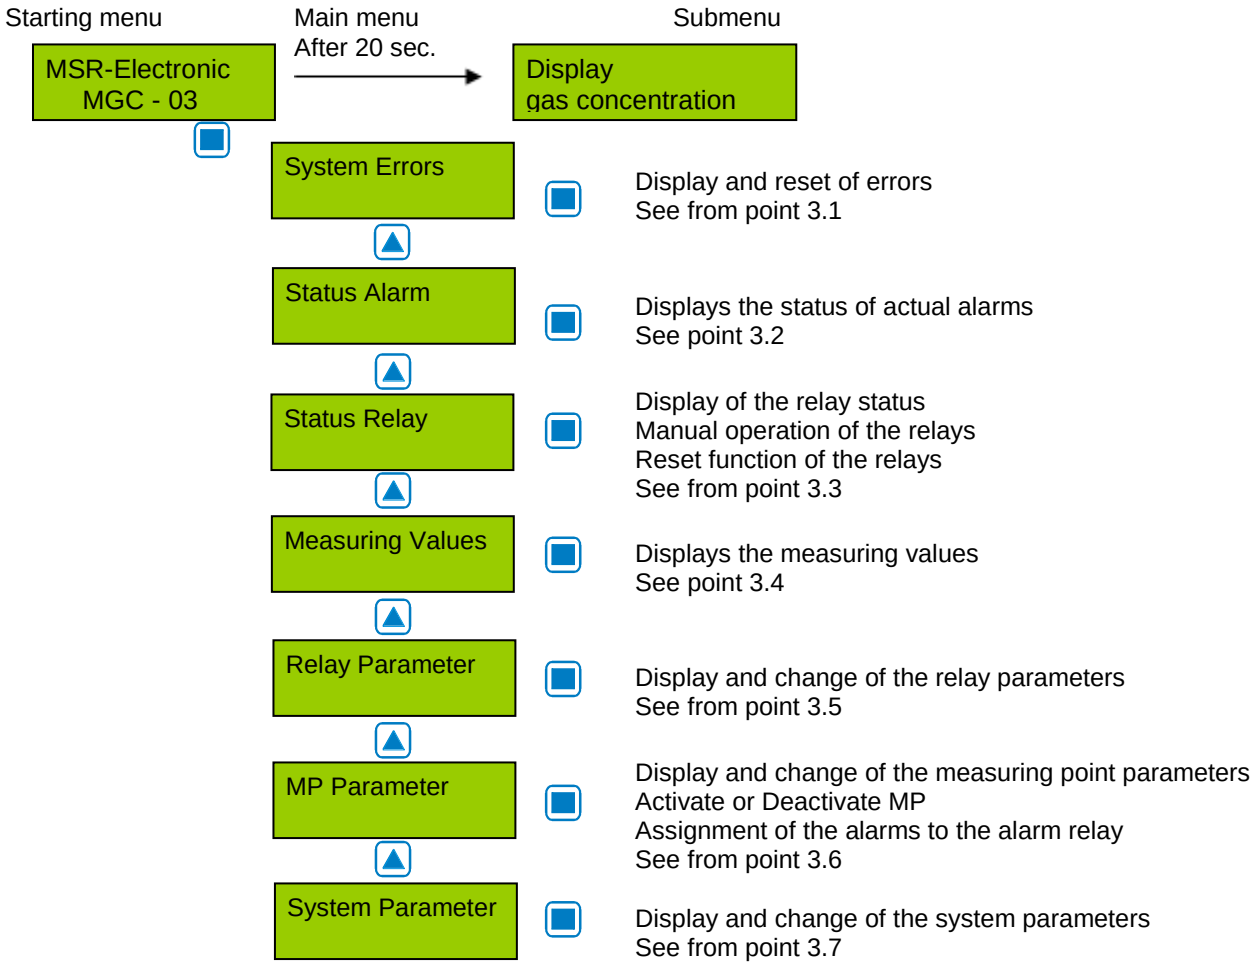

Phone: 0049(0)8531/9004-0 Fax: 0049(0)8531/9004-54
MSR-Electronic GmbH, Würdinger Str. 27, D 94060 Pocking www.msr-electronic.de
Specification subject to change without notice.
Printed in Germany

3.1 Fault Management

The integrated fault management records the last 15 faults in the menu “System Errors” with a stamp indicating how many days the error has already existed. The day counter subtracts active ones from 365. Additionally a record of the faults occurs in the “Error Memory”, which can be selected and reset only by the service technician.

An actual fault is displayed in plain text in the starting menu. The failure relay which is defined in the system parameter “Failure relay” is activated. The yellow LED in the front of the gas controller flashes.

In case of fault of a measuring point (MP) the alarms defined in the menu “MP Parameter” are activated additionally.

3.1.1 Acknowledge a Fault

Attention:
Acknowledging a fault is only possible after having removed the cause.

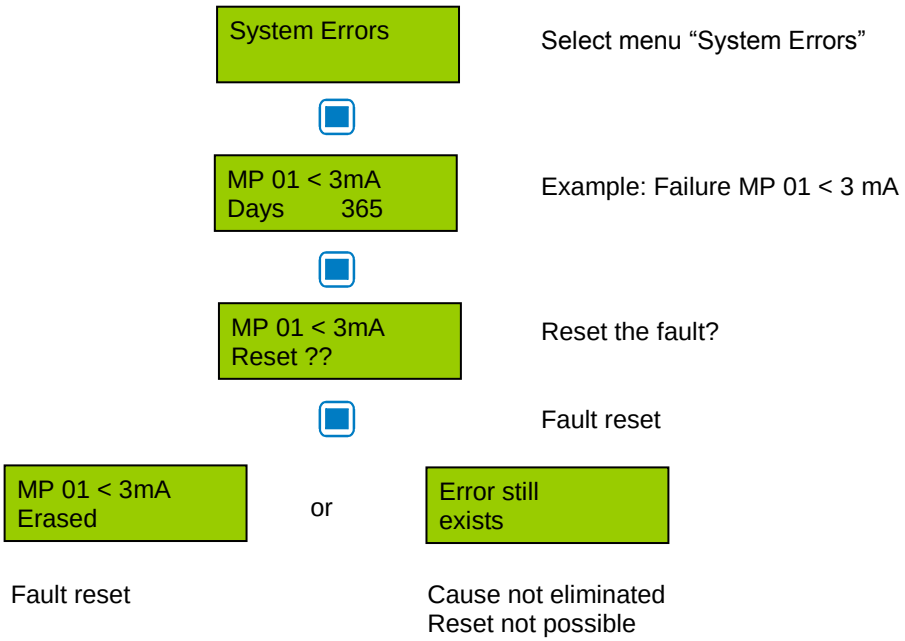

3.1.2 Error Memory

The menu “Error Memory“ in the main menu “System Error” can only be opened via code level 2.

In the error memory the last 15 faults are listed for the service technician even if they were already acknowledged in the menu “System Error“. The deletion of each individual message is effected in the same way as the reset of a fault.

Phone: 0049(0)8531/9004-0 Fax: 0049(0)8531/9004-54
MSR-Electronic GmbH, Würdinger Str. 27, D 94060 Pocking www.msr-electronic.de
Specification subject to change without notice.
Printed in Germany

3.1.3 System Errors

The following system error messages are recorded:

MP XX > 22 mA Current signal at analog input XX > 22 mA / 11 VDC.

Cause: Short-circuit at analog input or transmitter not calibrated, transmitter defective.

Solution: Check cable to transmitter, make calibration, replace the transmitter.

MP XX < 3 mA Current signal to analogue input XX < 3 mA / 1,3 VDC.

Cause: Wire breaking at analogue input or transmitter not calibrated, transmitter defective.

Solution: Check cable to transmitter, make calibration, replace the transmitter.

GC Error: Internal communication error I/O Board to LCD Board.

Cause: Internal error.

Solution: Change the Gas Controller module.

Maintenance: System maintenance is necessary.

Cause: Maintenance date exceeded.

Solution: Make the maintenance.

3.2 Status Alarm

Display of the actual alarms in plain text in the order of their arrival. Only those measuring points are displayed, where at least one alarm is active. Changes are not possible in this menu.



Symbol	Description	Function
MP 02	Measuring (MP) Point No.	
AX	Status alarm	A1 = Alarm 1 ON A2 = Alarm 2 ON A3 = Alarm 3 ON A4 = Alarm 4 ON

3.3 Status Relay

Display of the actual status of alarm relays, manual operation of the alarm relays.

Symbol	Description	Setting Status	Function
R 01	Relay No. 01		Select Relay No.
OFF	Status relay	OFF	OFF = Relay OFF (No gas alarm) ON = Relay ON (Gas alarm) Manual OFF = Relay manual OFF Manual ON = Relay manual ON

Phone: 0049(0)8531/9004-0 Fax: 0049(0)8531/9004-54
MSR-Electronic GmbH, Würdinger Str. 27, D 94060 Pocking www.msr-electronic.de

Specification subject to change without notice.
Printed in Germany

3.3.1 Manual Operation of the Relays

The manual operation of the alarm relays is managed in the menu “Status Relay”. If a relay is in the manual ON or OFF status, the orange/ red alarm LED at the Gas Controller is lit continuously.

The external operation of the alarm relay via an assigned digital input has priority to the manual operation in the menu "Status Relay" and to gas alarm.

Relays manually operated in the menu “Status Relay” are deleted again by selecting the function "Automatic".

Acknowledging the relays in latching mode is also effected in this menu.

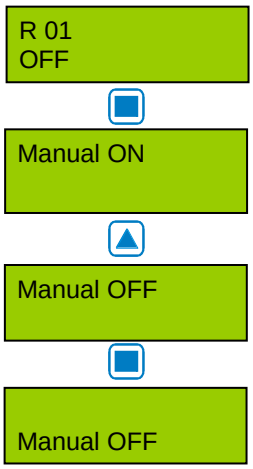

Select the relay

Select the function of manual operation

Select the function

Manual ON	= Relay ON
Manual OFF	= Relay OFF
Automatic	= Delete manual operation.
Reset?	= Reset of a latching mode.

Take over the function

3.4 Menu Measuring Values

This menu is for displaying the current value (CV) or the average value (AV) with gas unit and gas type for each active measuring point according to the defined mode of control (CV or AV mode). For gas type CO both values are displayed together.



Symbol	Description	Setting Status	Function
MP 01	Measuring P. No.		Selection of MP No
CO	Gas type	CO	See 3.6.2
ppm	Gas unit		See 3.6.2
CV	Current value	CV	Current value of gas concentration
AV	Average value		Average value (10 measured values within the time unit)
*	Control mode		Display of selected control mode (CV or AV)
Not active	Status MP	Not active	MP not active
Error	Fault MP		Current signal < 3 mA or > 22 mA

Phone: 0049(0)8531/9004-0 Fax: 0049(0)8531/9004-54
MSR-Electronic GmbH, Würdinger Str. 27, D 94060 Pocking www.msr-electronic.de

Specification subject to change without notice.
Printed in Germany

3.5 Menu Relay Parameters

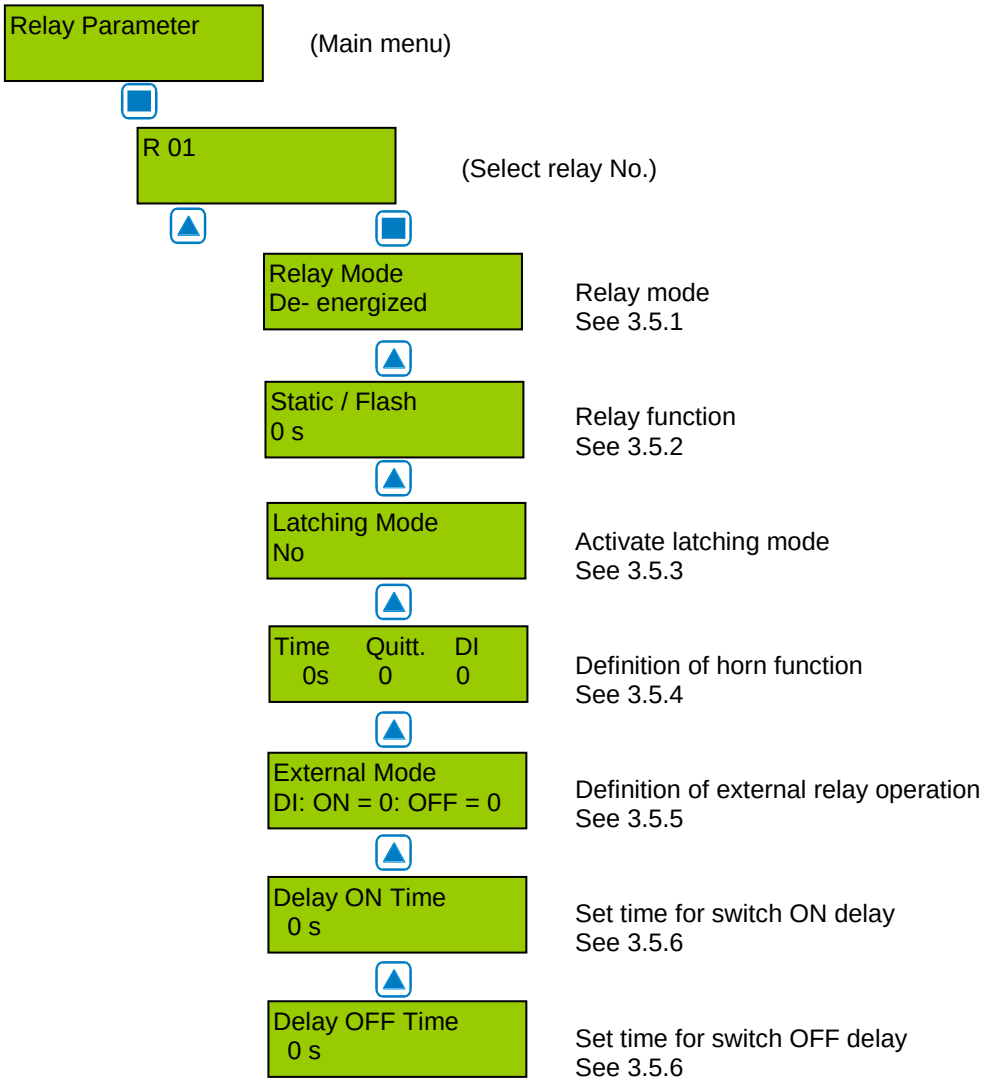

Phone: 0049(0)8531/9004-0 Fax: 0049(0)8531/9004-54
MSR-Electronic GmbH, Würdinger Str. 27, D 94060 Pocking www.msr-electronic.de

Specification subject to change without notice.
Printed in Germany

3.5.1 Relay Mode

Definition of relay mode:

Symbol	Description	Setting Status	Function
R 01	Relay No.		Selection of relay
De-energized	Relay Mode	De-energized	De-energized = Alarm ON = Relay ON Energized = Alarm ON = Relay OFF

3.5.2 Relay Function Static / Flash

Definition of relay function

Symbol	Description	Setting Status	Function
R 01	Relay No.		Selection of relay
0	Function	0	0 = Relay function static > 0 = Relay function flashing (= Time period in sec.) Impulse / Break = 1:1

3.5.3 Latching Mode

Definition of latching function

Symbol	Description	Setting Status	Function
R 01	Relay No.		Selection of relay
No	Latching Mode	No	No = Latching mode non active Yes = Latching mode active

Acknowledging a latching relay in the menu “Status Relay“ is only possible if the gas concentration is again lower than the alarm threshold including hysteresis. In this case the status latching occurs in the display.

Example: Alarm relay R2 with latching mode

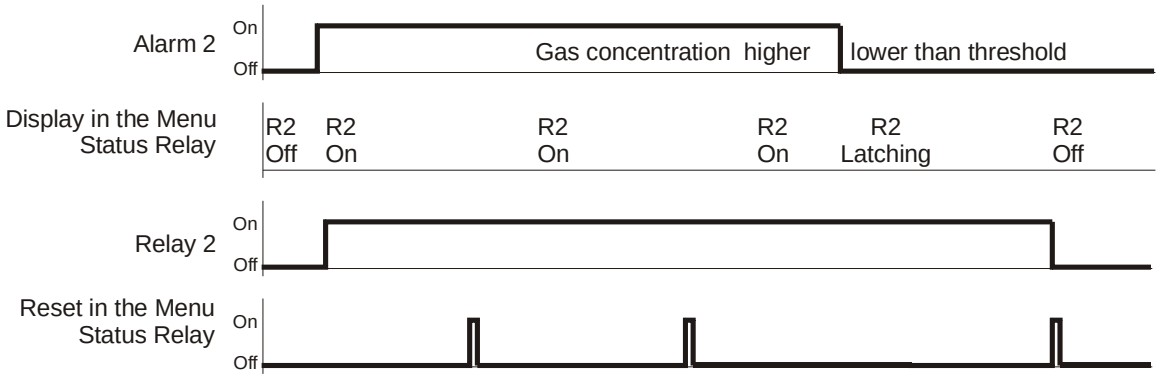

Phone: 0049(0)8531/9004-0 Fax: 0049(0)8531/9004-54
MSR-Electronic GmbH, Würdinger Str. 27, D 94060 Pocking www.msr-electronic.de

Specification subject to change without notice.
Printed in Germany

3.5.4 Horn Function

The alarm relay is defined as horn relay by this parameter with the following possibilities to reset.

- By pressing any of the 4 push-buttons (only possible in the starting menu).
- Automatic reset at the end of the fixed time.
- By an external push-button (assignment of the appropriate digital input).

The horn function is only activated if at least one of the two parameters (time or digital input) is set.

Special function Response

After acknowledging the relay (by push-button or externally) time starts. When this time has run out and the alarm is still acting, the relay is set again.

Symbol	Description	Setting Status	Function
R 04	Relay No.		Selection of relay
Quitt	Mode	0	0 = Reset of the relay after time having run out, or by push-button 1 = Reset of the relay by push-button, after time having run out and when alarm is still acting, relay is set again. (Response function).
Time		120	Time for automatic reset function or response function 0 = no reset function
DI		0	Assignment, which digital input resets the relay.

Acknowledge the horn relay

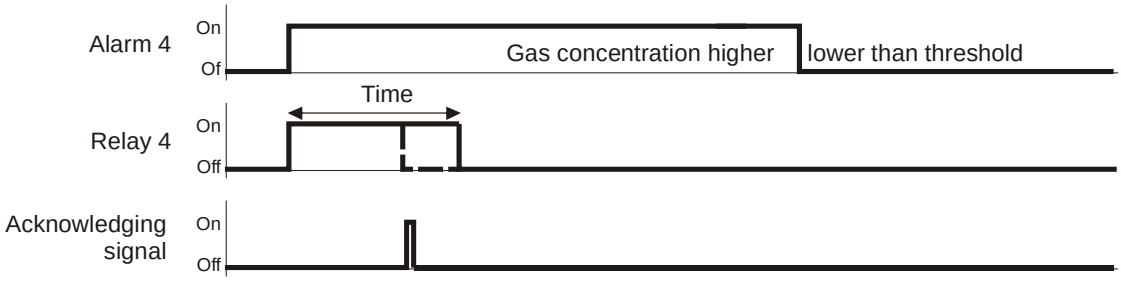

Special function „Response“. (Return of the horn relay)

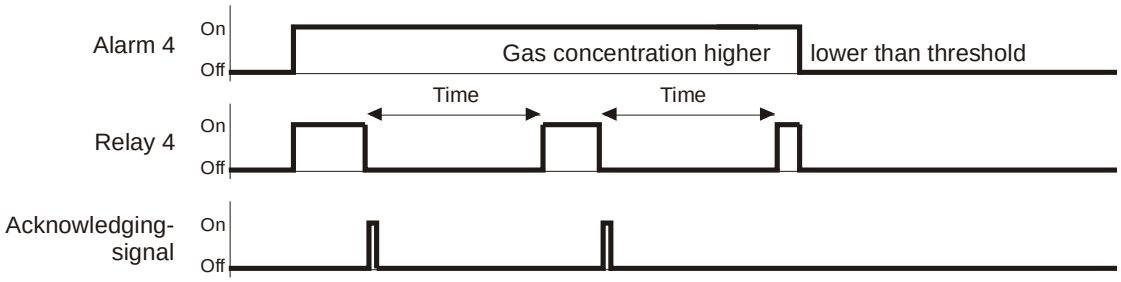

Phone: 0049(0)8531/9004-0 Fax: 0049(0)8531/9004-54
MSR-Electronic GmbH, Würdinger Str. 27, D 94060 Pocking www.msr-electronic.de

Specification subject to change without notice.
Printed in Germany

3.5.5 External Relay Operation

Assignment to a digital input (DI) for external switching of the alarm relay (ON and/or OFF). This function has priority to gas alarm and/or manual switching in the menu “Status Relay“.

Symbol	Description	Setting Status	Function
R 01	Relay No.		Relay Selection
DI-ON	External On	0	If digital input closed, relay switches ON
DI-OFF	External Off	0	If digital input closed, relay switches OFF

3.5.6 Delay Mode of the Relay

Delay time ON starts when the alarm is released and/or delay time OFF starts when the alarm returns to normal condition.

Symbol	Description	Setting Status	Function
R 01	Relay No.		Relay Selection
0 s	Delay Time for ON	0	Mode ON: Relay is only activated at the end of the defined time (sec.) 0 sec. = No delay
0 s	Delay Time for OFF	0	Mode OFF: Relay is only deactivated at the end of the defined time (sec.) 0 sec. = No delay

3.6 Menu MP Parameters

Display and change of parameters, assignment of alarms to alarm relays and activation of Measuring Points (MP).

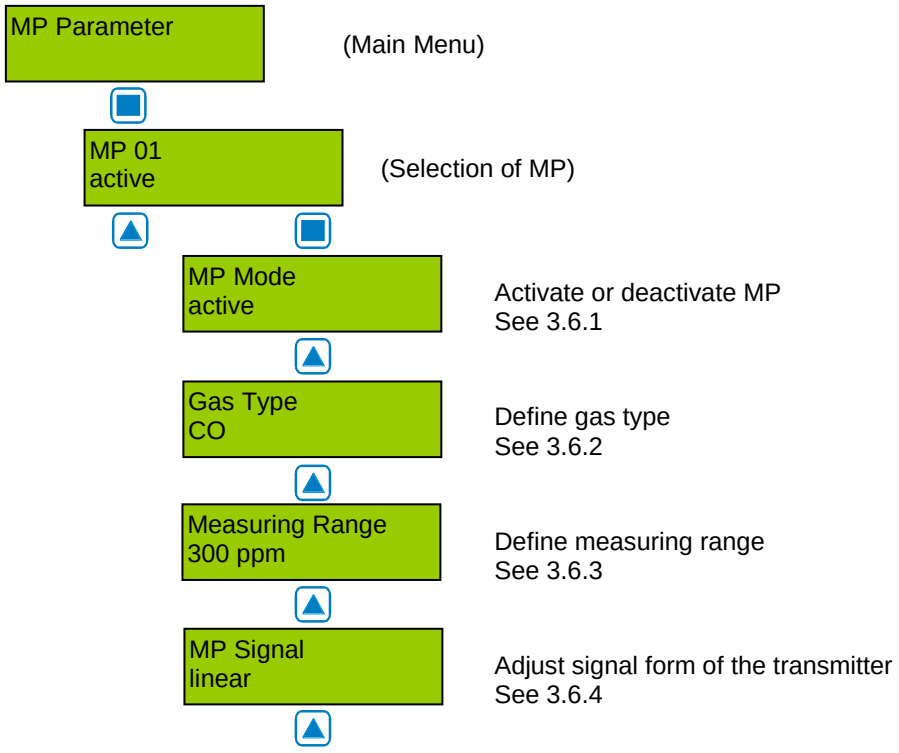

Phone: 0049(0)8531/9004-0 Fax: 0049(0)8531/9004-54
MSR-Electronic GmbH, Würdinger Str. 27, D 94060 Pocking www.msr-electronic.de

Specification subject to change without notice.
Printed in Germany

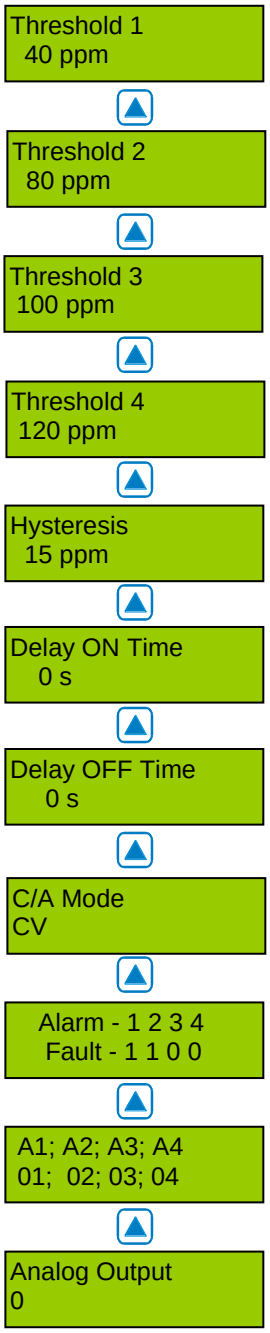

Define threshold 1
See 3.6.5

Define threshold 2
See 3.6.5

Define threshold 3
See 3.6.5

Define threshold 4
See 3.6.5

Hysteresis
See 3.6.5

Set delay time ON
See 3.6.6

Set delay time OFF
See 3.6.6

Define control mode
See 3.6.7

Assign MP fault to alarm
See 3.6.8

Assign alarm to alarm relay
See 3.6.9 and 3.6.10

Assign MP signal to analog output
See 3.6.10

Phone: 0049(0)8531/9004-0 Fax: 0049(0)8531/9004-54
MSR-Electronic GmbH, Würdinger Str. 27, D 94060 Pocking www.msr-electronic.de

Specification subject to change without notice.
Printed in Germany

3.6.1 Activate – Deactivate MP

Symbol	Description	Setting Status	Function
MP 01	Measuring point		Selection MP No.
Active	MP Status	Not active	Active = Measuring point activated at the controller Not active = Measuring point not activated at the controller

3.6.2 Selection Gas Type

Assign gas type to attached gas transmitters.

Symbol	Description	Setting Status	Gas type		Unit	Measuring range[1]
MP 01	Measuring point					
CO	Gas type	CO	CO	Carbon monoxide	ppm	0 – 300
			O2>	Oxygen (increasing)[2]	Vol%	0 – 25
			O3	Ozone	ppm	0 – 5
			TOX	Toxic gas	ppm	0 – XX
			CO2	Carbon dioxide[4]	ppk	0 – 50
			RH	Humidity	% RH	0 – 100
			Temp.	Temperature	° C	0 – 50
			R22	Refrigerant gas	ppm	0 – 2000
			R134	Refrigerant gas	ppm	0 – 300
			R123	Refrigerant gas	ppm	0 – 300
			R11	Refrigerant gas	ppm	0 – 300
			R411	Refrigerant gas	ppm	0 – 300
			R410	Refrigerant gas	ppm	0 – 300
			R407	Refrigerant gas	ppm	0 – 300
			R416	Refrigerant gas	ppm	0 – 300
			R404	Refrigerant gas	ppm	0 – 300
			R409	Refrigerant gas	ppm	0 – 2000
			R408	Refrigerant gas	ppm	0 – 2000
			R402	Refrigerant gas	ppm	0 – 2000
			R401	Refrigerant gas	ppm	0 – 2000
			VOC	Air quality	ppm	0 – 2000
			ETC	Ethylene oxide	ppm	0 – 20
			Cl2	Chlorine	ppm	0 – 100
			H2S	Hydrogen sulphide	ppm	0 – 200
			SO2	Sulphur dioxide	ppm	0 – 100
			Ex	Carbon dioxide[5]	ppm	0 – 2000
			O2<	Oxygen (falling)[3]	Vol%	0 – 25
			NH3	Ammonia	ppm	0 – 300
			NO2	Nitrogen dioxide	ppm	0 – 25
			NO	Nitrogen oxide	ppm	0 – 50
			Ex	Combustible gas	%LEL	0 – 100

[1] Recommendation without obligation
[2] Oxygen measurements: Alarm at increasing concentration
[3] Oxygen measurements: Alarm at falling concentration
[4] Carbon dioxide measurements with unit ppk (1 vol% = 10 ppk)
[5] Carbon dioxide measurements with unit ppm (1 vol% = 10.000 ppm)

Phone: 0049(0)8531/9004-0 Fax: 0049(0)8531/9004-54
MSR-Electronic GmbH, Würdinger Str. 27, D 94060 Pocking www.msr-electronic.de
Specification subject to change without notice.
Printed in Germany

3.6.3 Measuring Range

The measuring range can be defined arbitrarily between 10 and 10000. The measuring ranges in the table gas type are only recommendations without obligation.

The measuring range must agree with the signal (4 to 20 mA / (0)2 to 10 V) of the attached gas transmitter.
(4 mA / (0)2 V = Display 0 (ppm); 20 mA / 10 V = Display of the ultimate value of the measuring range)

3.6.4 MP Signal

Gas transmitters using electro-chemical or catalytic beat gas sensors normally produce a linear signal, proportional to the gas concentration.

Semiconductor gas sensors produce a non-linear (exponential) signal due to their measuring principle. This signal leads to a non- linear output signal of the gas transmitter (only for µGard analog transmitters).

The Gas Controller MGC-03 is prepared for both types, for gas transmitters with linear signal as well as for µGard analog transmitters with semiconductor sensor and non-linear signal. The signal type is defined in this menu.

Symbol	Description	Setting Status	Function
MP 01	Measuring Point		Selection of MP No.
Linear	MP Signal	Linear	Linear = Transmitter with linear output signal Non linear = Transmitter with non-linear output signal (only µGard series from MSR-E)

3.6.5 Threshold / Hysteresis

For each measuring point four alarm thresholds are available for free definition. If the gas concentration exceeds the adjusted alarm threshold, the associated alarm is set. If the gas concentration falls below the alarm threshold inclusive hysteresis the alarm is again reset.

Unused alarm thresholds have to be defined with full scale value, in order to avoid false alarms.

For O_2 measurement: Pay attention to the alarm activation at decreasing or increasing concentration!

Symbol	Description	Default Status		Function
MP 01	Measuring Point			Selection MP No.
40 ppm	Threshold	40 80 100 120 15	Threshold 1 Threshold 2 Threshold 3 Threshold 4 Hysteresis	Gas concentration > Threshold 1 = Alarm 1 Gas concentration > Threshold 2 = Alarm 2 Gas concentration > Threshold 3 = Alarm 3 Gas concentration > Threshold 4 = Alarm 4 Gas concentration < (Threshold X –Hysteresis) = Alarm X OFF

3.6.6 Delay of Alarm ON or OFF

Definition of alarm ON and/or alarm OFF delay. The function applies to all alarms of an MP.

Symbol	Description	Default Status	Function
MP 01	Measuring Point		Selection of MP No.
0 s	Delay Time ON	0	Gas concentration > Threshold: Alarm is only activated at the end of the fixed time (sec.). 0 sec. = No Delay
0 s	Delay Time OFF	0	Gas concentration < Threshold: Alarm is only deactivated at the end of the fixed time (sec.). 0 sec. = No Delay

The delayed activation of an existing gas alarm can cause damage to persons and objects.
The commissioning technician and/or the operator are solely responsible for the activation.

Phone: 0049(0)8531/9004-0 Fax: 0049(0)8531/9004-54
MSR-Electronic GmbH, Würdinger Str. 27, D 94060 Pocking www.msr-electronic.de
Specification subject to change without notice.
Printed in Germany

3.6.7 Control Mode

Definition of the alarm evaluation by means of current (CV) or average value (AV).

Symbol	Description	Default Status t	Function
MP 01	Measuring Point		Selection of MP No.
CV	Evaluation	CV	CV = Control by the current gas value AV = Control by the average gas value

Current- average value function see: 3.7.4

3.6.8 MP Fault Assigned to Alarm

Definition, which alarms are activated in case of a fault at the measuring point.

Symbol	Description	Default Status	Function
MP 01	Measuring Point		Selection of MP No.
Alarm - 1 2 3 4 Fault - 1 1 0 0	Failure MP	1 1 0 0	0 = Alarm not ON at MP failure 1 = Alarm ON at MP failure

3.6.9 Alarm Assigned to Alarm Relay

Each of the 4 alarms can be assigned to any alarm relay. Unused alarms are not assigned to any alarm relay.

Symbol	Description	Default Status	Function
MP 01	Measuring Point		Selection of MP No.
01	A1 A2 A3 A4	01 02 03 04	01 = Alarm 1 activates alarm relay R 01 02 = Alarm 2 activates alarm relay R 02 03 = Alarm 3 activates alarm relay R 03 00 = Alarm 4 doesn't activate any alarm relay

3.6.10 MP Signal Assigned to Analog Output

The measuring point signal can be assigned to the analog output. At this the signal defined in the control mode (current or average value) is transmitted.

Analog output see also: 3.7.2

Symbol	Description	Default Status	Function
MP 01	Measuring Point		Selection of MP No.
0	A	0	0 = MP Signal not assigned to analog output 1 = MP Signal assigned to analog output 1

Phone: 0049(0)8531/9004-0 Fax: 0049(0)8531/9004-54
MSR-Electronic GmbH, Würdinger Str. 27, D 94060 Pocking www.msr-electronic.de

Specification subject to change without notice.
Printed in Germany

3.7 Menu System Parameters

Displays and changes the system parameters of the Gas Controller module.

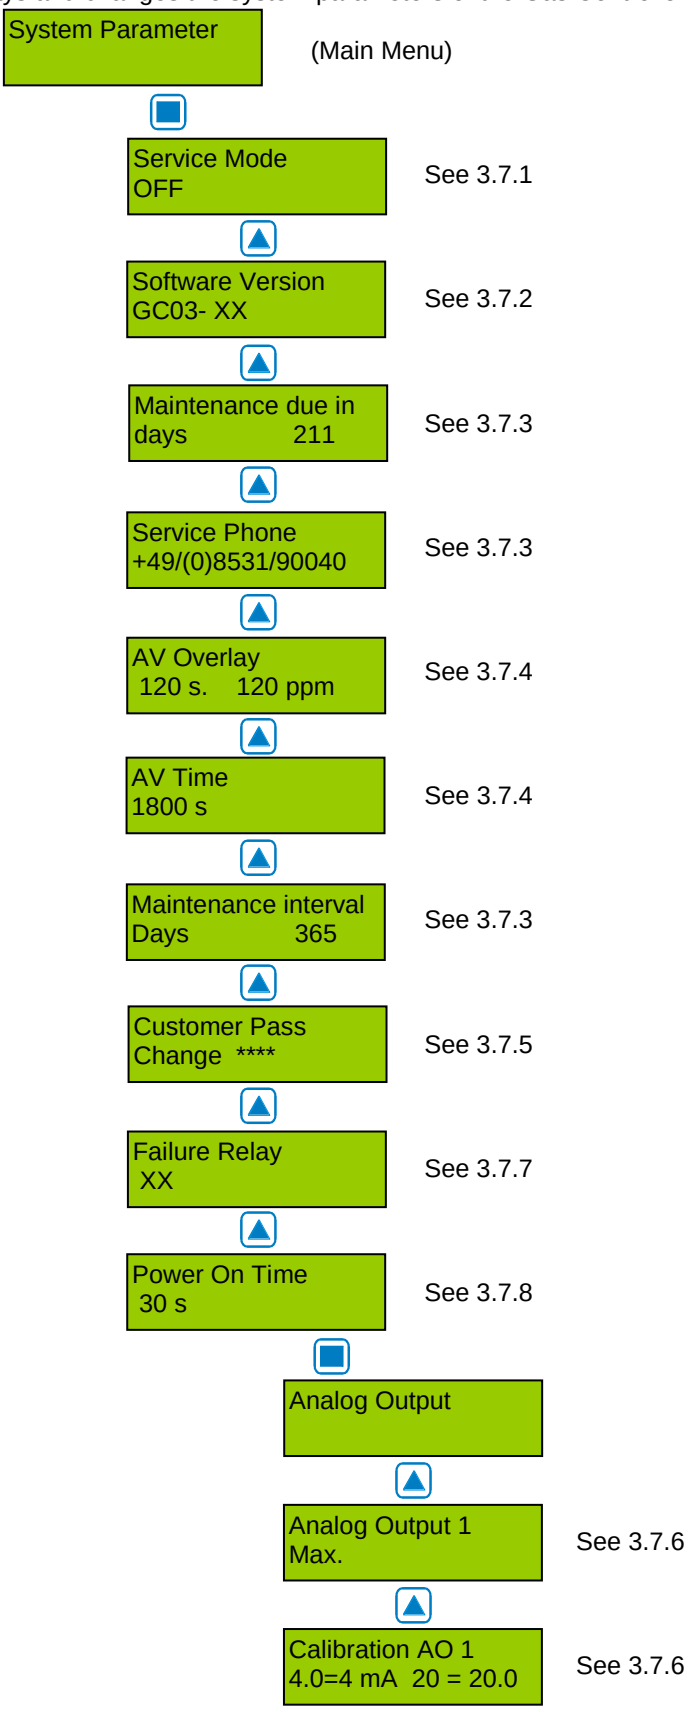

Phone: 0049(0)8531/9004-0 Fax: 0049(0)8531/9004-54
MSR-Electronic GmbH, Würdinger Str. 27, D 94060 Pocking www.msr-electronic.de

Specification subject to change without notice.
Printed in Germany

3.7.1 Service Mode

When the service mode is active (ON) the alarms are not transmitted to the alarm relays (in case of calibration or service work). The service mode ON is reset automatically after 60 minutes or manually in the menu “Service Mode”.

Symbol	Description	Default Status	Function
Off	Service Mode	Off	Off = Alarms activate the associated alarm relays On = Alarms are not transmitted to the alarm relays

3.7.2 Software Version

Symbol	Description	Default Status	Function
GC03-XX	Software Version		XX = Software Version

3.7.3 Maintenance Concept

Integrated in the MGC-03 system there is a control of the maintenance intervals required by law or by the customer. At commissioning or after maintenance the number of days until the next due maintenance is entered = Reset of the maintenance message (service phone no.). When the days counter reaches zero, the failure signal is activated the following morning at 9 o’clock, and the phone no. of the service technician occurs in the display. The remaining days until the next maintenance can be read from the menu “Maintenance in “.

The service phone no. can be entered individually in the next menu.

Symbol	Description	Default Status	Function
XXX	Maintenance in		Remaining days until the next maintenance
XXX	Maintenance interval		Reset of the maintenance message by entering the number of days until the next maintenance
0853....	Phone No.		Input of the individual service phone no.

3.7.4 Average Function

For each active measuring point the Gas Controller module calculates the arithmetic average value out of 10 measurements got within the time unit defined in the menu “AV Time“. This average value is indicated in the menu “Measuring Values” next to the current value. At each measuring point the control mode (current or average value) is defined for the alarm evaluation.

The alarm evaluation of the control mode average value is overlaid by the current value, when the current value exceeds the alarm threshold defined in the menu “AV Overlay“. The overlay is delayed by the time factor defined in this menu. With time factor 0 sec. the overlay is not active.

Symbol	Description	Default Status	Function
120 s 120 ppm	AV Overlay	120 s 120 ppm	sec. = Delay time of average value overlay. 0 = No overlay function ppm = Alarm threshold of average overlay
1800 s	AV Time	1800 s	sec. = Time for the calculation of the average value

Phone: 0049(0)8531/9004-0 Fax: 0049(0)8531/9004-54
MSR-Electronic GmbH, Würdinger Str. 27, D 94060 Pocking www.msr-electronic.de

Specification subject to change without notice.
Printed in Germany

3.7.5 Customer Password (Code 4)

Change the system password for level 4

Symbol	Description	Default Status	Function
XXXX	Customer Password	XXXX	XXXX = Definition of an individual 4-digit customer's password (level 4)

3.7.6 Analog Output

The Gas Controller has one analog output (AO) with a (0)4 to 20 mA / (0)2 to 10 V signal. The signal of one or two measuring points can be assigned to the analog output. The assignment is effected in the menu "MP Parameters" for each MP. The measuring point sends the signal as defined in the menu "C/A Mode" (CV or AV).

The output signal (mA / V) and starting point (0 /20%) is selected at the I/O Board by means of jumpers. See fig. 4.

Out of the signals of all assigned measuring points the Gas Controller module determines the minimum, the maximum or the average value and transmits it to the analog output. The definition, which value is transmitted, is effected in the menu "Analog Output 1".

The analog output can be calibrated at 4 and at 20 mA, only in mA mode. Therefore an ampere meter (measuring range 25 mA) can be attached to the AO and the respective factor has to be changed until the analog output corresponds to 4 and/or 20 mA. During calibration evaluation of the measuring point signals is not possible. This calibration is effected by the factory. The factors shall not be changed.

Symbol	Description	Default Status	Function
Max.	Select Output Mode	Max.	Min. = Displays the minimum value of all assigned MP Max. = Displays the maximum value of all assigned MP Average = Displays the average value of all assigned MP
4.0 20.0	Calibration	4.0 20.0	4. = Calibration factor at 4 mA 20.0 = Calibration factor at 20 mA

3.7.7 Define the Failure Relay

Definition of the failure relay. See also fault management (3.1)

Symbol	Description	Default Status	Function
04	Fault Relay	R04	R04 = Define the fault relay

3.7.8 Power On Time

Gas sensors need a running-in period, until the chemical process of the sensor reaches stable conditions. During this running-in period the current signal can lead to an unwanted releasing of a pseudo alarm. Therefore the power on time is started at the Gas Controller module after having switched on the power supply. While this time is running out, the Gas Controller does not activate any alarms. The power on status occurs in the starting menu.

Symbol	Description	Default Status	Function
30 s	Power On Time	30 s	XX = Define the power on time (sec.)

Phone: 0049(0)8531/9004-0 Fax: 0049(0)8531/9004-54
MSR-Electronic GmbH, Würdinger Str. 27, D 94060 Pocking www.msr-electronic.de

Specification subject to change without notice.
Printed in Germany

4 Mounting / Electrical Connection

The Gas Controller is fixed to the wall through the marked mounting holes at the back side of the housing. These mounting holes are accessible after opening the housing. If the mounting holes at the bottom of the housing are used, the device loses the IP 65 protection.

The mounting holes at the plastic housing are covered with the enclosed caps after the end of the assembly.

At the stainless steel housing version you additionally have to plug off the PCB. See fig. 1.

We recommend considering the following when choosing the mounting position:

- Installation height approx. 1.6 m for easy operation.
- Cables are introduced from below.
- Keep at least 150 mm of distance on the right side in order to open the stainless steel housing.
- Customer's instructions.

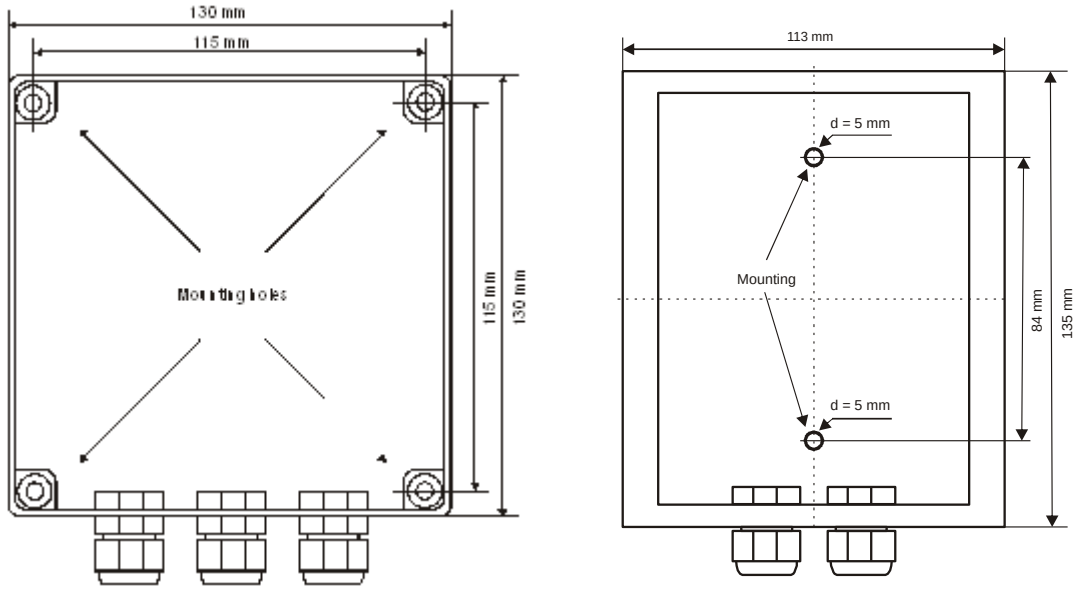

Fig. 1 Standard plastic housing Stainless steel housing

4.1 Electrical Connection

The technical requirements and regulations for wiring, electrical security, as well as project specific and environmental conditions etc. must be observed when mounting.

The electrical installation may only be completed by a qualified electrician in full compliance with pertinent regulations

We recommend the following cable types[1]

- Power supply J-Y(St)Y 2x2 x 0.8
- Alarm relay J-Y(St)Y 2x2 x 0.8
- Gas transmitter J-Y(St)Y 2x2 x 0.8

[1] The recommendation does not consider local conditions such as fire protection etc.

For the exact position of the terminals see the following connection diagram.

When choosing the option „Power Supply" you have to make sure that a switch or a circuit breaker is provided in the building automation especially for the MGC. It must be installed easily accessible near the MGC. It has to be marked as a disconnecting device for the MGC. This switch or circuit breaker shall meet the relevant requirements of IEC 60947-1 and IEC 60947-3.

Phone: 0049(0)8531/9004-0 Fax: 0049(0)8531/9004-54
MSR-Electronic GmbH, Würdinger Str. 27, D 94060 Pocking www.msr-electronic.de

Specification subject to change without notice.
Printed in Germany

4.2 Connection Diagram

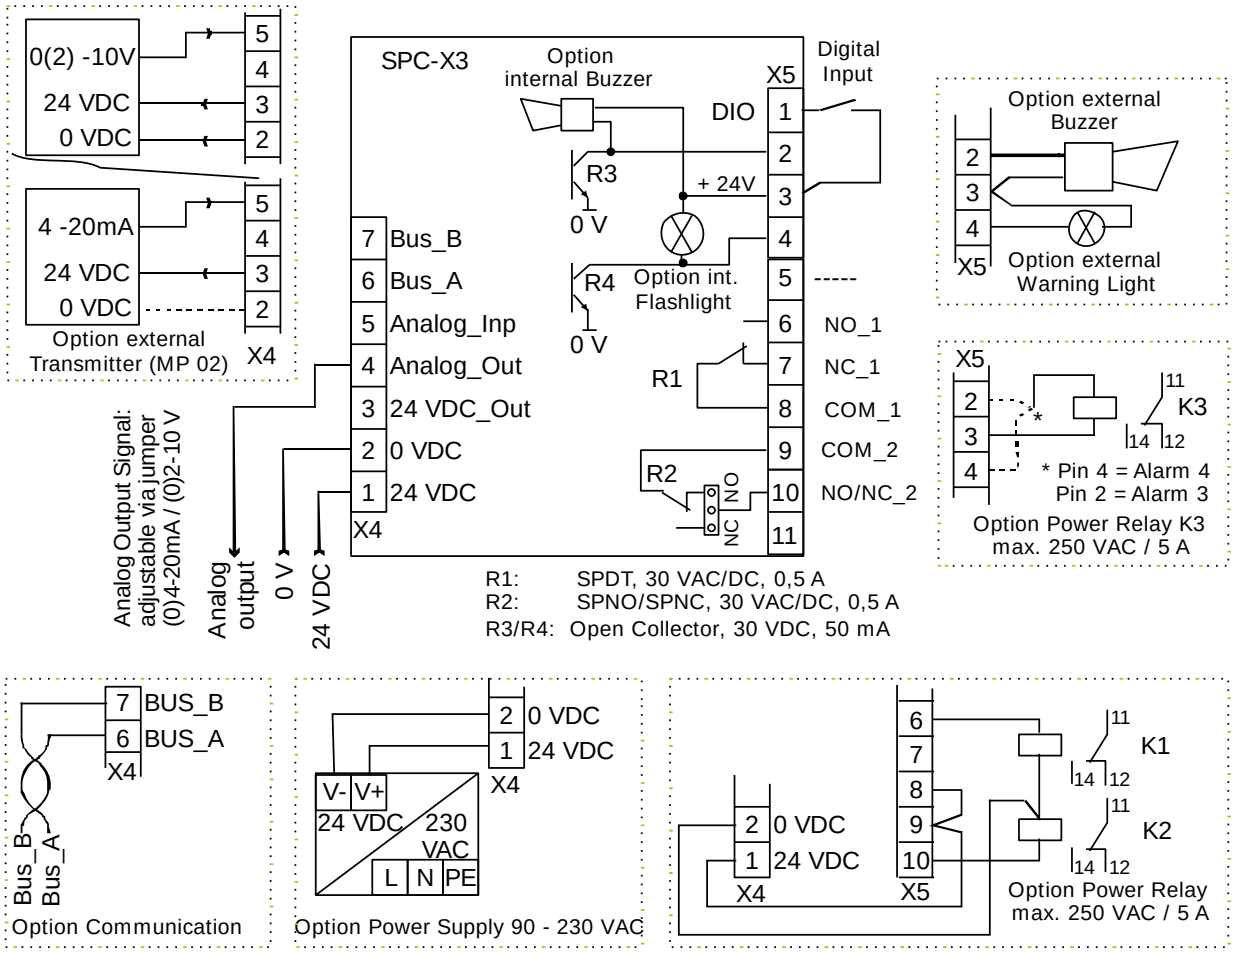

Fig. 2 Connection diagram

The wiring diagram shows the analog inputs with 4 – 20 mA signal. With appropriate hardware configuration (factory configurable only) 2-10 V signals can be connected, too. Each board is provided with a label indicating the configuration of the analog inputs. See fig. 3.

Note:

The alarm outputs R3 and R4 are designed as open collector outputs. Warning lamps / horn combination units with common ground can therefore not be connected!

Phone: 0049(0)8531/9004-0 Fax: 0049(0)8531/9004-54
MSR-Electronic GmbH, Würdinger Str. 27, D 94060 Pocking www.msr-electronic.de

Specification subject to change without notice.
Printed in Germany

4.3 Connector Block / Overview MGC-03 Module

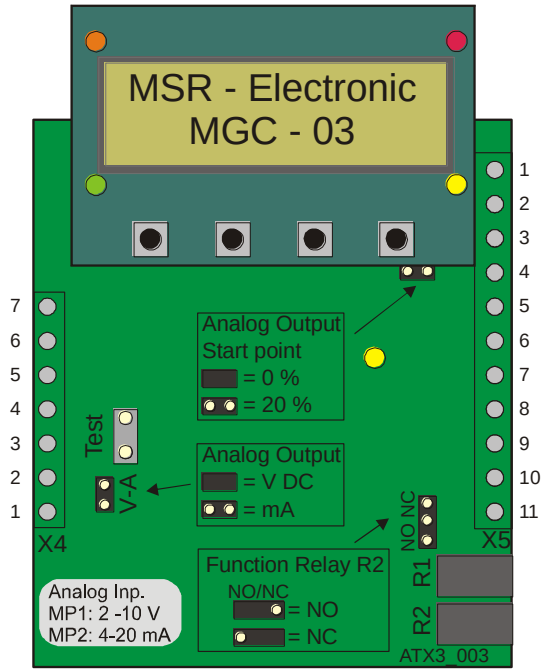

Fig. 3 PCB

Jumper 0- 20 %	Jumper V-A	Output signal
Not set	Not set	0 – 20 mA
Set	Not set	4 – 20 mA
Not set	Set	0 – 10 V
Set	Set	2 – 10 V

Fig. 4 Selection Output Signal

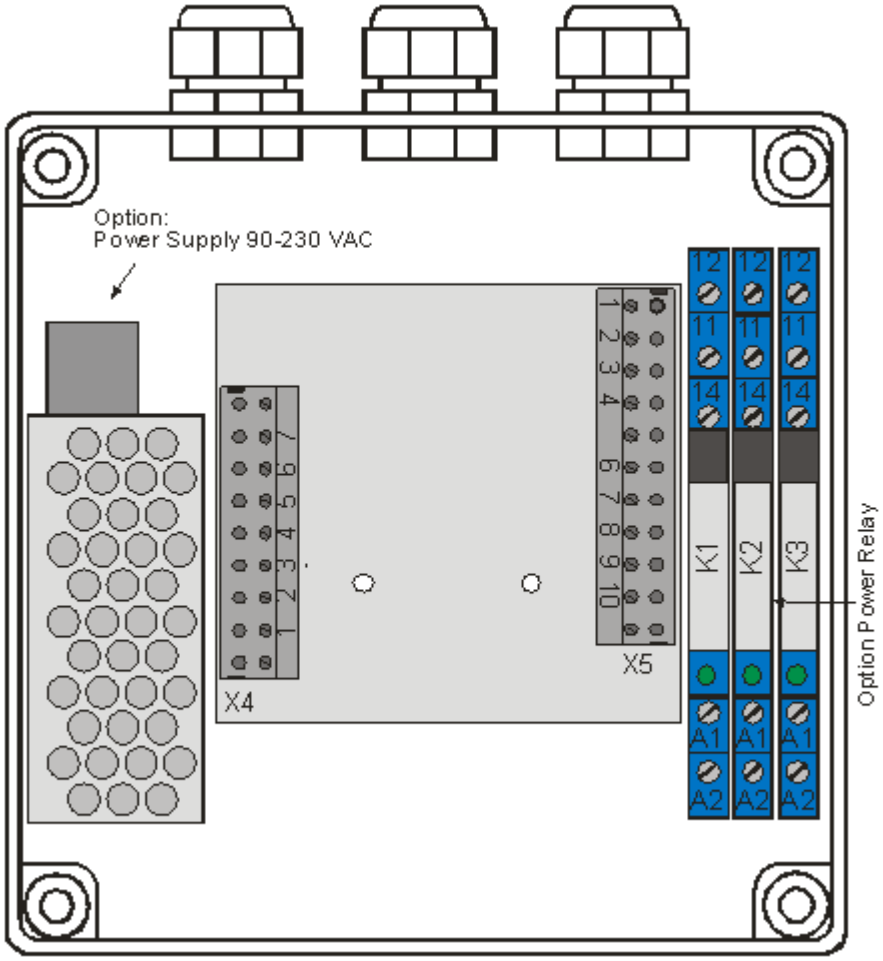

Fig. 5 Housing

5 Commissioning

5.1 Commissioning

Prior to commissioning, the wiring of the Gas Controller including all field devices must be completely terminated!

Check the transmitter input signal, it has to be the same as indicated on the label of the PCB. See fig. 3

Select the contact for relay 2 with jumper NC/NO. See fig. 2 and 3.

Select the analog output signal with jumper V-A and 0-20%. See fig. 3 and 4.

After switching the power supply “ON” and at the end of the Power ON Time, the Gas Controller is ready for use.

The Gas Controller is delivered with standard parameters and set points. The registration of the attached gas transmitters and the assignment of the alarm relays to the individual alarms must always be performed during commissioning. Additionally all other parameters have to be checked and adapted to the local conditions.

The standard parameters can be taken from the following configuration and parameter card. We recommend registering the individual parameters and set points into the list.

We recommend checking the parameters and set points according to the following check list.

Phone: 0049(0)8531/9004-0 Fax: 0049(0)8531/9004-54
MSR-Electronic GmbH, Würdinger Str. 27, D 94060 Pocking www.msr-electronic.de

Specification subject to change without notice.
Printed in Germany

5.2 Checklist Commissioning

System Parameter

Parameter	Finished
Parameter of average function	
Password level 1 (customer's password)	
Function analog output	
Define fault relay	
Power ON time	
Service phone no.	
Maintenance date	

Relay Parameter

Parameter	Finished			
Relay R	1	2	3	4
Relay mode				
Function static / flash				
Latching mode				
Horn function				
External relay operation				
Delay ON time				
Delay OFF time				

MP Parameter

Parameter	Finished	
MP No.	1	2
MP mode		
Gas type		
Measuring range		
MP signal		
Threshold 1		
Threshold 2		
Threshold 3		
Threshold 4		
Hysteresis		
Delay ON time		
Delay OFF time		
C/A mode		
Assigned failure <> alarm		
Assigned alarm <> alarm relay		
Assig. MP sig. <> analog output		

Phone: 0049(0)8531/9004-0 Fax: 0049(0)8531/9004-54
MSR-Electronic GmbH, Würdinger Str. 27, D 94060 Pocking www.msr-electronic.de

Specification subject to change without notice.
Printed in Germany

6 Configuration and Parameter Card

Commission:		Project No.		
Customer:				
Commissioning - Company				
Commissioning - Date		Service Technician		

6.1 Configuration Card of System Parameters

Service	Software Version	Maintenance due in x days	Service Phone	AV Overlay			Maintenance interval	Costumer Pass	Fault Relay	Power ON Time
				ppm	Time	AV Time				
Default	GC 03	211	0853190040	120	120	1800	365	1234	4	30 s

Analog Output 1		
	Calibration	
Mode	= 4	= 20
Max.	4.0	20.0

6.2 Configuration Card of Alarm Relays

Relay No.	Mode	Static Flash	Latching Mode	Horn Function			External		Delay Time	
							ON	OFF	ON	OFF
				Time	Quitt	DI	DI	DI	DI	DI
Default	Energized	0 s	No	0	0	0	0	0	0	0
R01										
R02										
R03										
R04										

6.3 Configuration Card of Measuring Parameters

MP No.	MP Status	Gas Type	Measuring Range	MP Signal	Thresholds				Hyst
					A1	A2	A3	A4	
Default	Not active	CO	300	Linear	40	80	100	120	15
01									
02									

Delay Time (sec.)		CV/ AV	Assigned MP Fault < >Alarm				Assigned Alarm <> Alarm Relay				AO
ON	OFF		A1	A2	A3	A4	A1	A2	A3	A4	
0	0	AV	1	1	0	0	R1	R2	R3	R4	0

Phone: 0049(0)8531/9004-0 Fax: 0049(0)8531/9004-54
MSR-Electronic GmbH, Würdinger Str. 27, D 94060 Pocking www.msr-electronic.de

Specification subject to change without notice.
Printed in Germany

7 Technical Data

Electrical	
Power supply	18 – 28 VDC/AC, reverse polarity protected
Power consumption (without options)	100 mA, max. 2,5VA
Analog output signal Selectable: Current / Voltage : Starting point 0 or 20%	(0) 4 – 20 mA, load ≤ 500 Ω (0) 2 – 10 V, load ≥ 50 kΩ Proportional, overload and short-circuit-proof
Visualization	
Display	Two lines, each 16 characters
Status LED (4)	Normal operation- Fault- Alarm 1- Alarm 2
Operation	4 push- buttons, menu-driven
Operation Environment	
Humidity	15 – 90 % RH non condensing
Working temperature	- 10° C to + 50° C (14 °F to 122 °F)
Storage temperature	5° C to + 30° C (41 °F to 86 °F)
Pressure range	Atmospheric ± 10 %
Monitored Medium	
Toxic, combustible gases and vapours, Freons, oxygen, temperature, humidity, pressure, etc.	With 4 – 20 mA / (0) 2 – 10 V signal
Physical	
Enclosure stainless steel, type 5	Stainless steel V2A
Colour	Natural, brushed
Dimensions (W x H x D)	113 x 135 x 45 mm (4.48 x 5.35 x 1.8 in.)
Weight	Approx. 0.6 kg (1.32 lbs.)
Protection class	IP 55
Installation	Wall mounting, pillar mounting
Cable entry	Standard 2 x M 20
Enclosure plastic version, type C	Polycarbonate
Combustion	UL 94 V2
Colour	RAL 7032 (light grey)
Dimensions (W x H x D)	130 x 130 x 75 mm (5.12 x 5.12 x 2.95 in.)
Weight	Approx. 0.6 kg (1.32 lbs.)
Protection	IP 65
Installation	Wall mounting
Cable entry	Standard 3 x M 20
Wire connection	Screw type terminals 0.25 to 2.5 mm^2 (14 to 30 AWG)
Guidelines	EMC Guidelines 2004/108/EEC Low voltage guideline 73/23/EEC VDI 2053
Warranty	One year material and workmanship

Phone: 0049(0)8531/9004-0 Fax: 0049(0)8531/9004-54
MSR-Electronic GmbH, Würdinger Str. 27, D 94060 Pocking www.msr-electronic.de

Specification subject to change without notice.
Printed in Germany

Options	
Analog input (external transmitter)	
Analog input (1)	4 – 20 mA, input resistance 200 Ω, (0) 2 – 10V, input resistance 25 kΩ, overload- and short-circuit-proof
Power supply for external analog transmitter	24 VDC max. 50 mA
Buzzer	
Acoustic pressure	85 dB (A) (distance 300 mm) (1 ft.)
Frequency	3500 Hz
LED flashlight red	
Flashing frequency	Adjustable
Luminosity	> 5.000 mcd
Power supply 90 - 230 VAC	
Consumption max.	25 VA
Power Relay (K1 – K3)	
Switch capacity	250 VAC, 5 A, potential-free, SPDT
Serial Interface	
Transceiver	RS 485 / 19200 Baud

Phone: 0049(0)8531/9004-0 Fax: 0049(0)8531/9004-54
MSR-Electronic GmbH, Würdinger Str. 27, D 94060 Pocking www.msr-electronic.de

Specification subject to change without notice.
Printed in Germany

8 Part Disposal

Since August 2005 there are EC-wide directives defined in the EC Directive 2002/96/EC and in national codes concerning the waste electrical and electronic equipment and also regarding this device.

For private households there are special collecting and recycling possibilities. For this device isn't registered for the use in private households, it mustn't be disposed this way. You can send it back to your national sales organisation for disposal. If there are any questions concerning disposal please contact your national sales organisation.

Outside the EC, you have to consider the corresponding directives.

9 Notes and General Information

It is important to read this user manual carefully in order to understand the information and instructions. The PolyGard® MGC-03 gas monitoring, control and alarm system may only be used for applications in accordance to the intended use. The appropriate operating and maintenance instructions and recommendations must be followed.

Due to permanent product developments, MSR reserves the right to change specifications without notice. The information contained herein is based on data considered to be accurate. However, no guarantee or warranty is expressed or implied concerning the accuracy of these data.

9.1 Intended Product Application

The PolyGard® MGC-03 is designed and manufactured for controlling, for saving energy and keeping OSHA air quality in commercial buildings and manufacturing plants (i.e. detection and automatic exhaust fan control for automotive maintenance facilities, enclosed parking garages, engine repair shops, warehouses with forklifts, fire stations, tunnels, etc.).

9.2 Installers` Responsibilities

It is the installer's responsibility to ensure that all PolyGard® MGC-03 are installed in compliance with all national and local regulations and OSHA requirements. All installations shall be executed only by technicians familiar with proper installation techniques and with codes, standards and proper safety procedures for control installations and the latest edition of the National Electrical Code (ANSI/NFPA70). It is also essential to follow strictly all instructions as provided in the user manual.

9.3 Maintenance

We recommended checking the PolyGard® MGC-03 system regularly. Due to regular maintenance differences in efficiency can easily be corrected.

9.4 Limited Warranty

MSR warrants the PolyGard® MGC-03 against defects in material or workmanship for a period of one (1) year beginning from the date of shipment. Should any evidence of defects in material or workmanship occur during the warranty period, MSR will repair or replace the product at their own discretion, without charge.

This warranty does not apply to units that have been altered, had attempted repair, or been subjected to abuse, accidental or otherwise. The above warranty is in lieu of all other express warranties, obligations or liabilities.

This warranty applies only to the PolyGard® MGC-03. MSR shall not be liable for any incidental or consequential damages arising out of or related to the use of the PolyGard® MGC-03.

Phone: 0049(0)8531/9004-0 Fax: 0049(0)8531/9004-54
MSR-Electronic GmbH, Würdinger Str. 27, D 94060 Pocking www.msr-electronic.de

Specification subject to change without notice.
Printed in Germany